

aspex

novista
doorsets

installation guide

hidden door system
types: TUS & TUT


aspex

www.aspex-uk.co.uk

novista
doorsets

Assembly instructions

1. insert the timber into the aluminium frame profile and knock into place with a mallet or hammer and wooden block

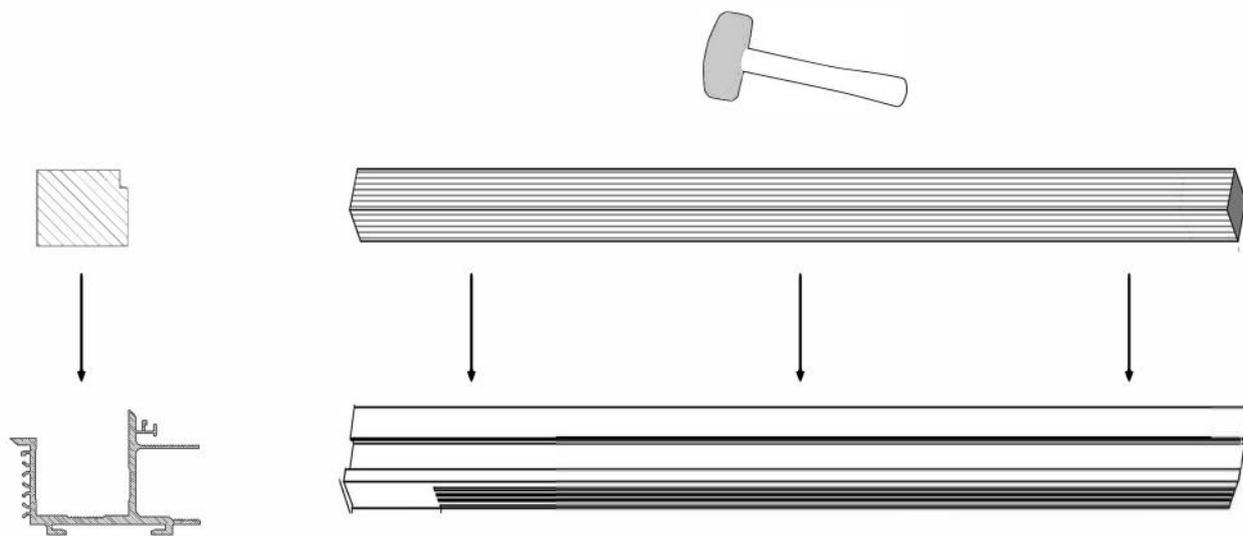


2. ensure that the timber is fully inserted and flush with the top of the frame




Details

A - B - C

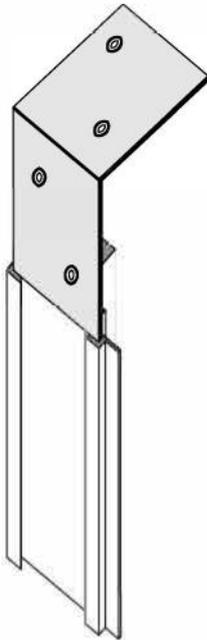


Detail A

insert corner connectors
item no. 13011 TUS TUT

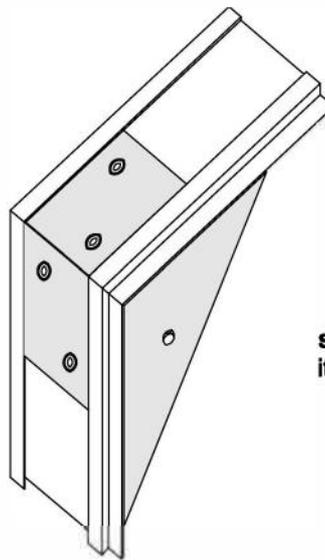

Detail C


snap-in the angle disks (triangle)
item no. 13011 TUS TUT

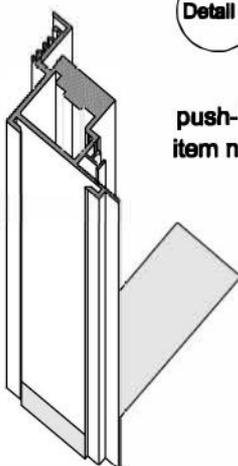


Detail B

push-in the bottom spreader bar
item no. 13011 TUS TUT

Assembly instructions

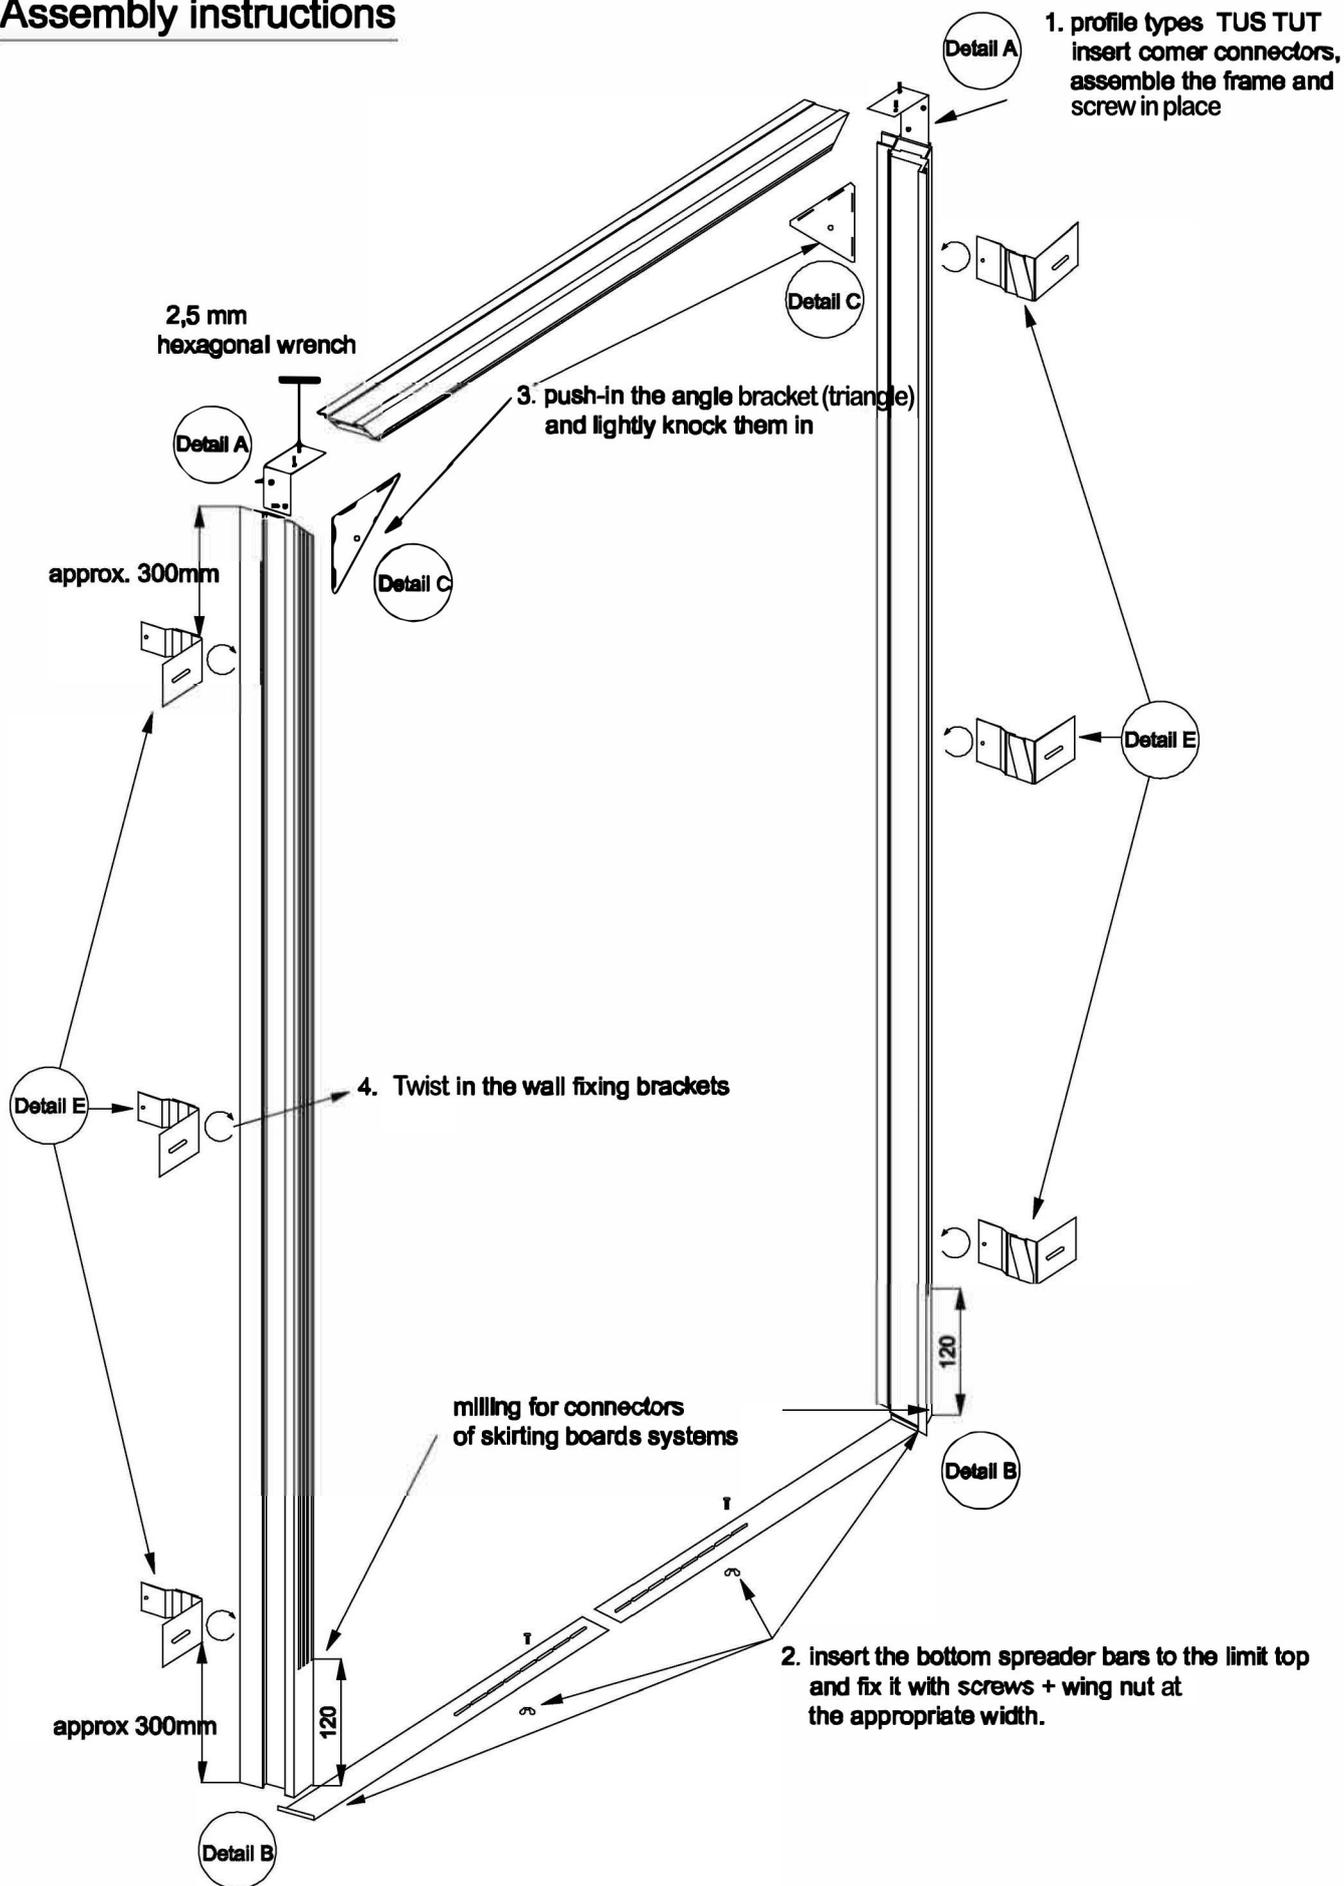


Installation of aluminium frame

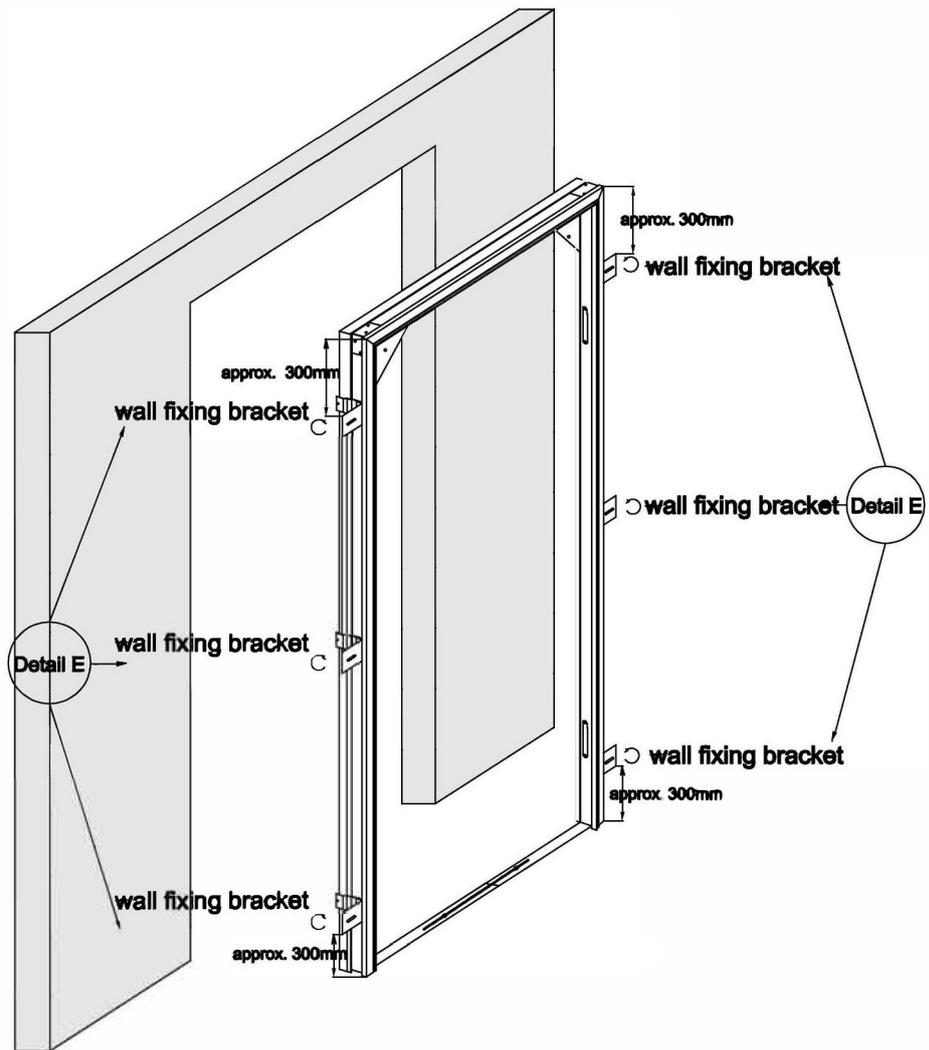

Detail E

1. attach wall fixing brackets
item no. 13010 TUS TUT

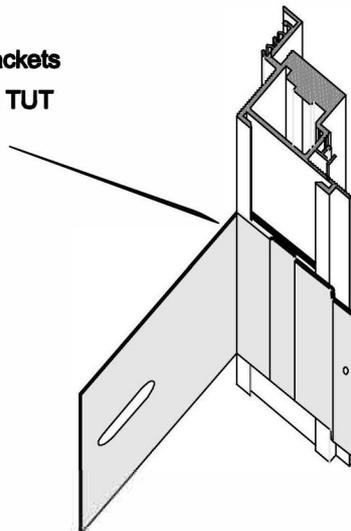


Installation of aluminium frame

3. click in the plastic mesh, and overlap at corners

Detail F

1. insert the frame into the wall opening, and adjust it horizontally and vertically

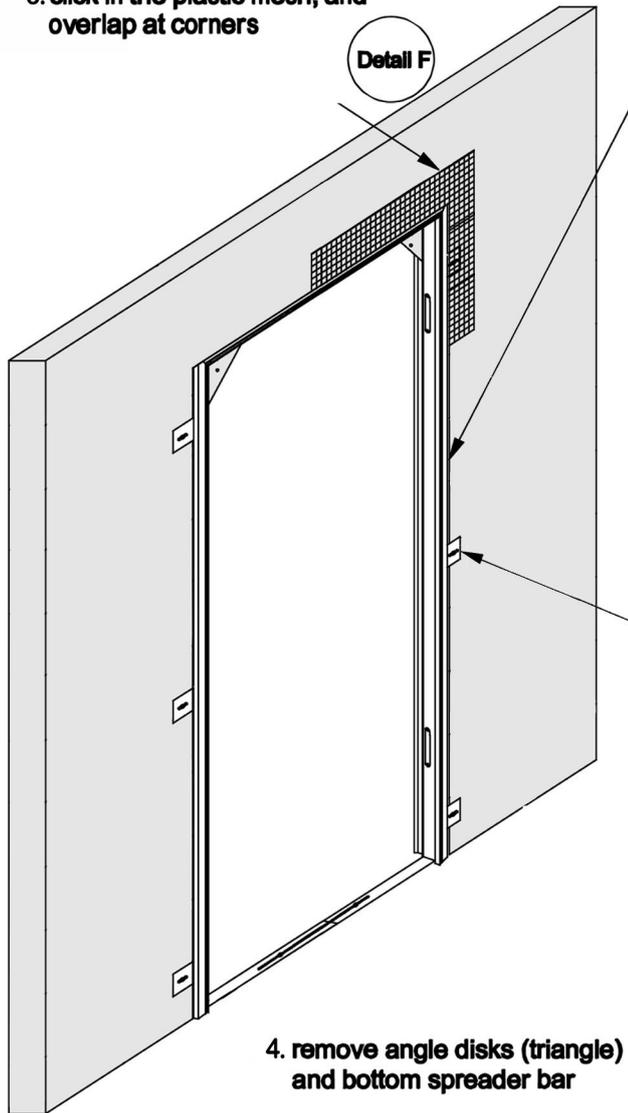


2. fix frame to the wall

4. remove angle disks (triangle) and bottom spreader bar


Detail F

item no. 13042
TUS TUT


click in the mesh after assembly of the frame

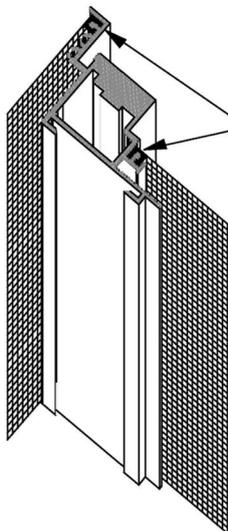

overlap

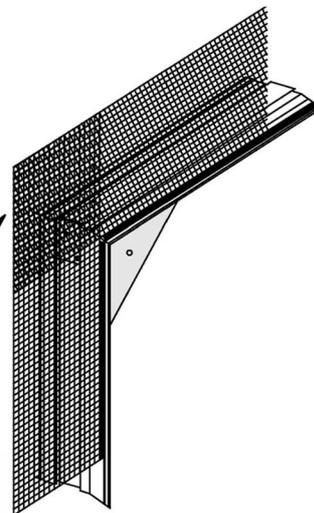

Installation of aluminium frame

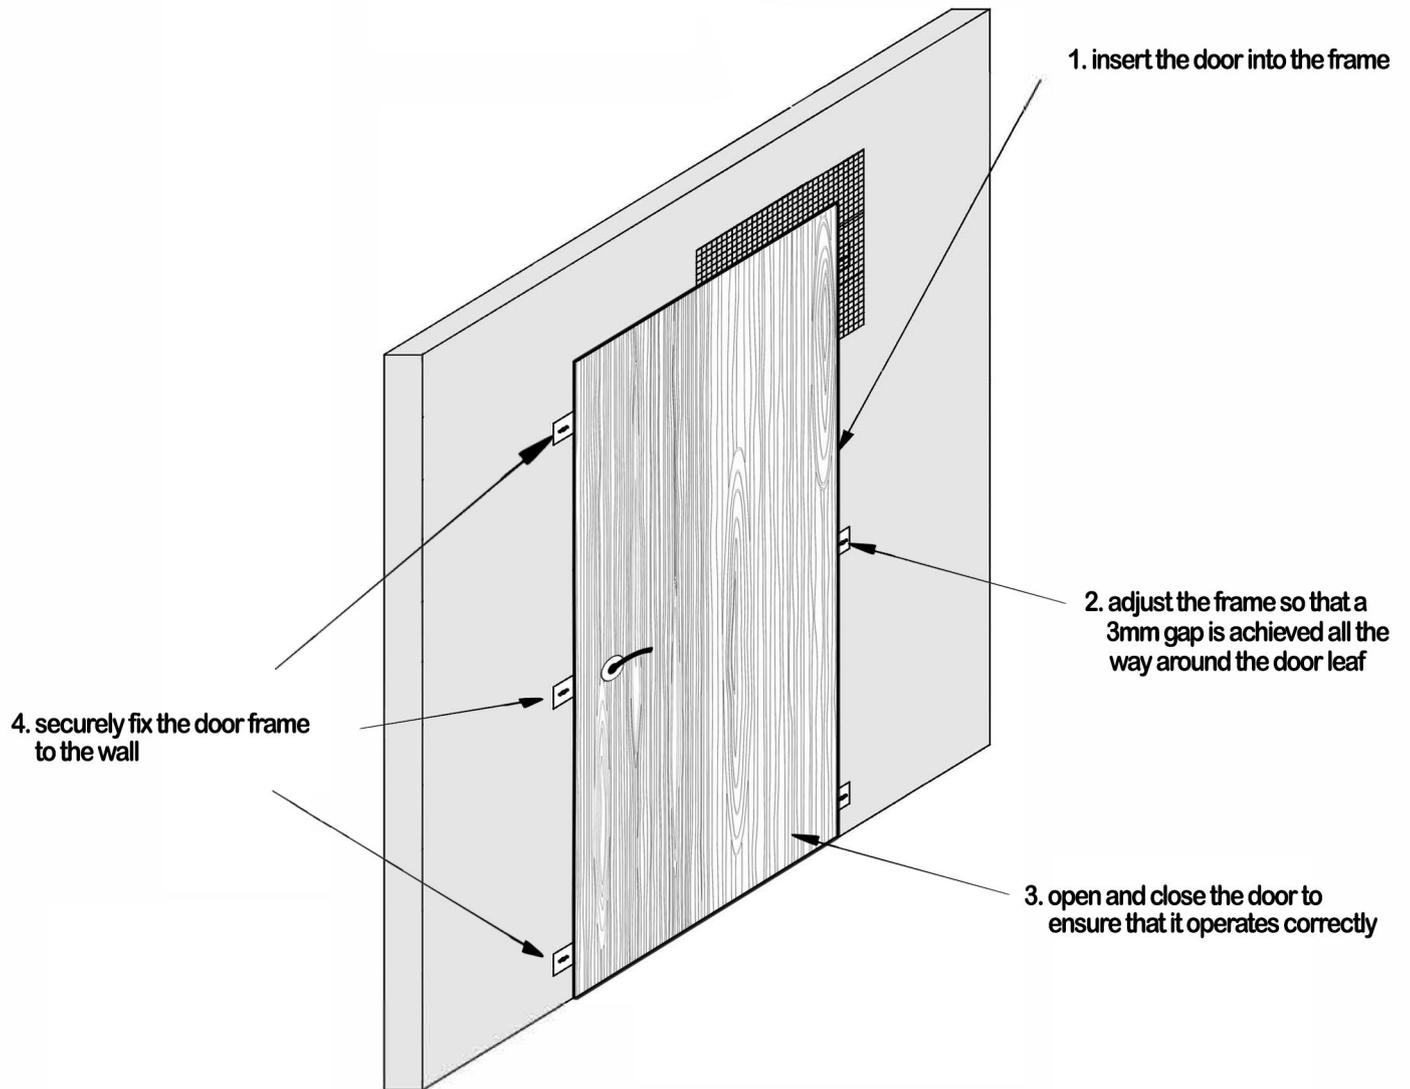

5. remove the door leaf and plaster the wall